

SMARTPATH SYSTEM:

6'x8' LANDING AREA



Instant Path Solution

EASY TO INSTALL

Ensure ground surface is levelled before installing panels.

Tools Required



Rubber Mallet



Safety Glasses



Work Gloves



Measuring tape



Electric screwdriver



Utility knife or Circle saw



ALWAYS WEAR SAFETY GOGGLES AND GLOVES THROUGHOUT THIS PROJECT



6' x 8'
LANDING AREA
AREA FOR EQUIPMENT & MATERIAL

SMARTPATH SYSTEM:

6'x8' LANDING AREA



Instant Path Solution

EASY TO INSTALL

Ensure ground surface is levelled before installing panels.

Tools Required

- Rubber Mallet
- Safety Glasses
- Work Gloves
- Measuring tape
- Electric screwdriver
- Utility knife or Circle saw

ALWAYS WEAR SAFETY GOGGLES AND GLOVES THROUGHOUT THIS PROJECT

Materials Required :

SMARTPATH BASE x9

2"x4"x8' LUMBER x17

2" SCREWS

1. BUILD PANELS

Place wood upside down. Press rubber bases (Fig 1) down onto the boards, at recommended spacing. Insert 2" screws as shown to secure wood firmly. Build three identical panels (Fig 2).

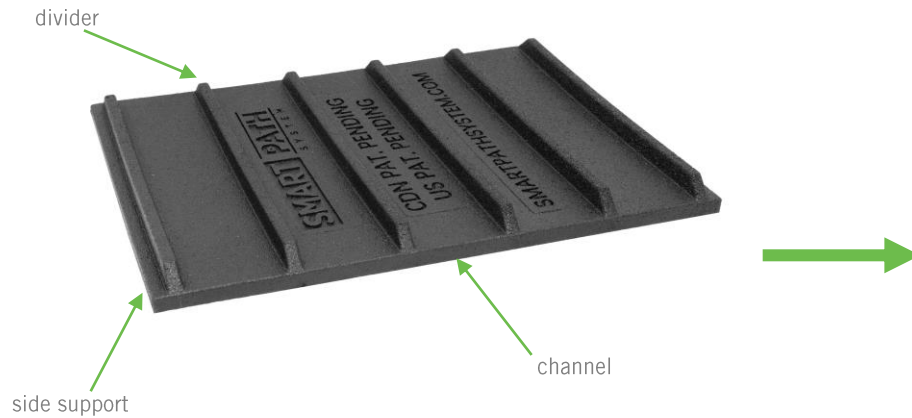


Fig 1. SmartPath™ recycled rubber base

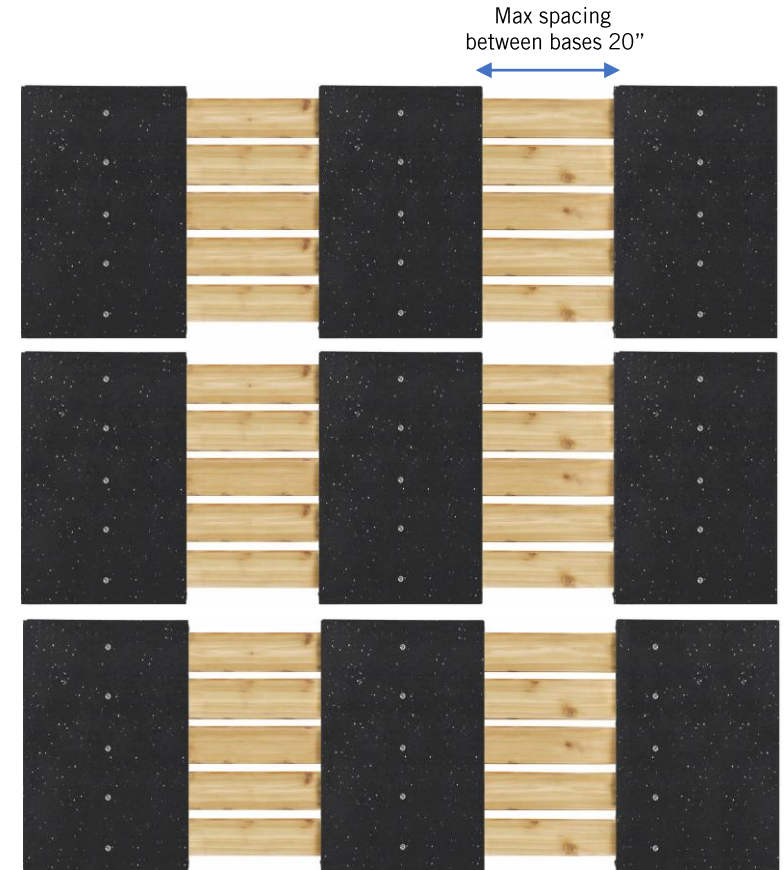


Fig 2. Landing area panel, bottom view. Fasten base to 2x4' lumber, upside down, with 2" screws placed one screw per board, on center). Three identical panels.



SMARTPATH SYSTEM:

6'x8' LANDING AREA



Instant Path Solution

EASY TO INSTALL

Ensure ground surface is levelled before installing panels.

Tools Required



Rubber Mallet



Safety Glasses



Work Gloves



Measuring tape



Electric screwdriver




Utility knife or Circle saw



ALWAYS WEAR SAFETY GOGGLES AND GLOVES THROUGHOUT THIS PROJECT



Materials Required :



SMARTPATH BASE x9



2"x4"x8' LUMBER x17



2" SCREWS

2. ALIGN PANELS AND ADD JOINER BOARDS

Align panels 4" apart and place a joiner board on side supports (Fig 3) and secure joiner boards by screwing into the top of the wood, down into the side supports of the rubber base (Fig 4). A joiner board is the same lumber as the rest of your path, but shown here in different color for illustration purposes only.



Fig 3. Align panels 4" apart and place a joiner board between the panels on the side supports of the SmartPath bases.

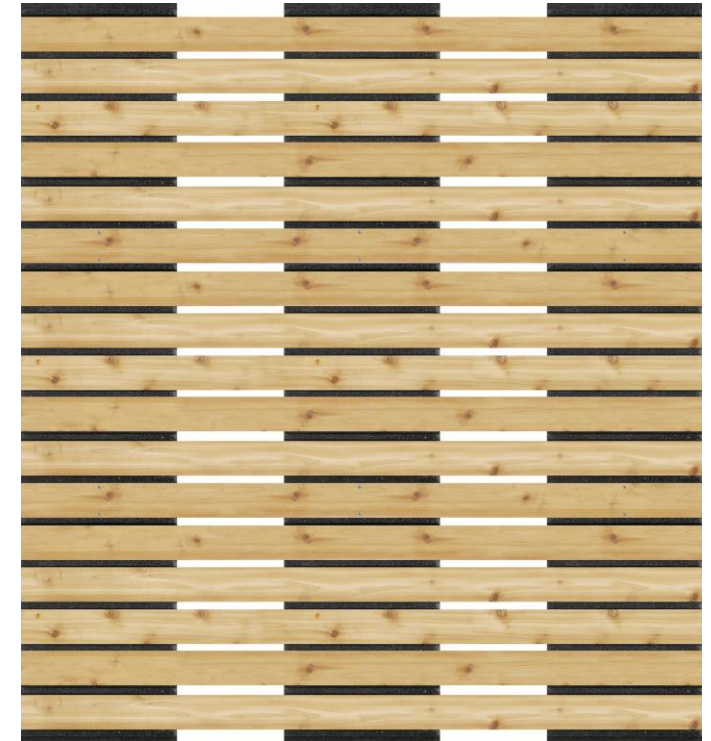


Fig 4. Fasten the joiner boards to the side supports by screwing the wood from the top of the board down into the rubber.