

# SMARTPATH SYSTEM:

DOUBLE WIDE WALKING PATH



Instant Path Solution

## EASY TO INSTALL

Ensure ground surface is levelled before installing panels.

### Tools Required



Rubber Mallet



Safety Glasses



Work Gloves



Measuring tape



Electric screwdriver



Utility knife or Circle saw



ALWAYS WEAR SAFETY GOGGLES AND GLOVES THROUGHOUT THIS PROJECT



# 4' WIDE JOBSITE PATHWAY

## DOUBLE WIDE WALKING PATH

# SMARTPATH SYSTEM:

DOUBLE WIDE WALKING PATH

## SMART PATH SYSTEM

Instant Path Solution

## EASY TO INSTALL


Ensure ground surface is levelled before installing panels.

### Tools Required


-  Rubber Mallet
-  Safety Glasses
-  Work Gloves
-  Measuring tape
-  Electric screwdriver
-  Utility knife or Circle saw

 ALWAYS WEAR SAFETY GOGGLES AND GLOVES THROUGHOUT THIS PROJECT

### Materials Required :

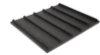 SMARTPATH BASES = ((LINEAR FEET ÷ 8) x2) +1) x2

 2"x4" LUMBER = (LINEAR FEET ÷8) x10) +1

 2" SCREWS

## 1. BUILD PANELS

Place wood upside down. Press rubber bases (Fig 1) down onto the boards at recommended spacing. Insert 2" screws as shown to secure wood firmly (Fig 2). Build one starter panel with three bases (Fig 3) leaving half the channels available for the extender panel to be connected. Build all remaining extender panels with only two bases per panel (Fig 4): one centered and another at one end, with half the base filled. Build one end panel (Fig 5)

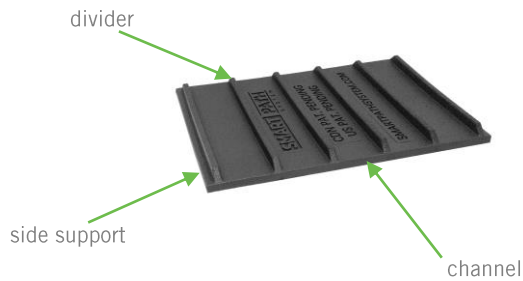


Fig 1. SmartPath™ recycled rubber base



Fig 2. Starter panel, bottom view. Fasten base to 2x4' lumber, upside down, with 2" screws placed one screw per board, on center)



Fig 3. Starter panel top view.

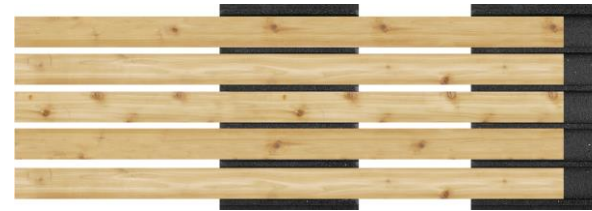


Fig 4. Extender panel top view.



Fig 5. End panel top view.



# SMARTPATH SYSTEM:

DOUBLE WIDE WALKING PATH



Instant Path Solution

## EASY TO INSTALL

Ensure ground surface is levelled before installing panels.

### Tools Required



Rubber Mallet



Safety Glasses



Work Gloves



Measuring tape




Electric screwdriver



Utility knife or Circle saw

### Materials Required :



SMARTPATH BASES = ((LINEAR FEET ÷ 8) x2) +1) x2



2"x4" LUMBER = (LINEAR FEET ÷8) x10) +1



2" SCREWS

## 2. CONNECT PANELS

Connect the extender panel to the starter panel. Fasten as shown and secure wood of extender panel with 2" screws from the top (Fig 6). Repeat along length of the path (Fig 7), replicating a second path to be adjoined. Connect the end-panel when you have reached the finished length.

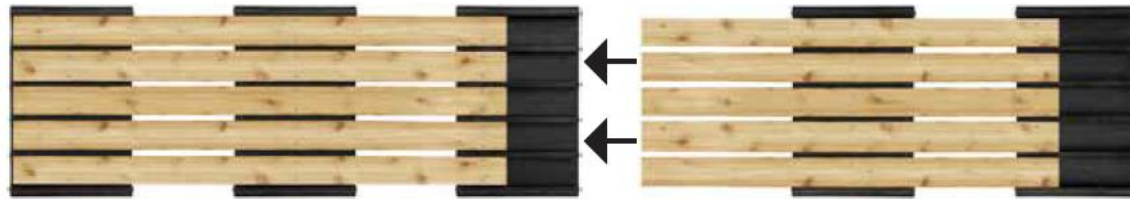


Fig 6. Starter panel showing the connecting and fastening of the extender panel.



starter panel

extender panel 1

extender panel 2

end panel

Fig 7. Starter panel with three extender panels to create a continuous walking path, for two side-by-side SmartPath walkways. In STEP 3, these will be connected with joiner boards.



ALWAYS WEAR SAFETY GOGGLES AND GLOVES THROUGHOUT THIS PROJECT



# SMARTPATH SYSTEM:

DOUBLE WIDE WALKING PATH

**SMART PATH**  
SYSTEM

Instant Path Solution

## EASY TO INSTALL

Ensure ground surface is levelled before installing panels.

### Tools Required



Rubber Mallet



Safety Glasses



Work Gloves



Measuring tape



Electric screwdriver




Utility knife or Circle saw



ALWAYS WEAR SAFETY GOGGLES AND GLOVES THROUGHOUT THIS PROJECT



### Materials Required :



SMARTPATH BASES = ((LINEAR FEET ÷ 8) x2) +1) x2



2"x4" LUMBER = (LINEAR FEET ÷8) x10) +1



2" SCREWS

## 3. INCREASE PATH WIDTH USING JOINER BOARDS

To increase width of pathway, place a joiner board on side supports (Fig 7) and secure joiner boards by screwing into the top of the wood, down into the side supports of the rubber base. A joiner board is the same lumber as the rest of your path, but shown here in different color for illustration purposes only.



Fig 7. Align the panels 4" apart to allow space for the joiner boards



Fig 8. Add joiner boards along the entire length of the path, securing the joiner board by screwing into the top of the wood and down into the side supports of the base.